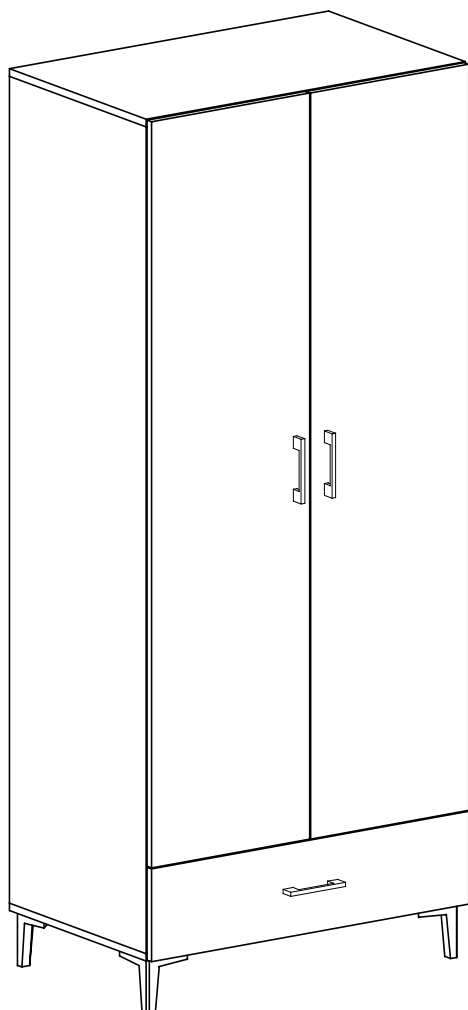
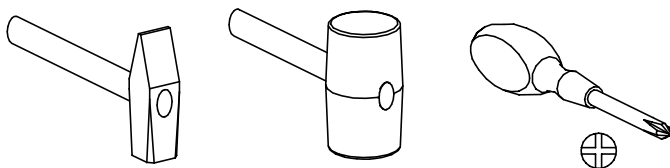
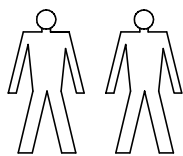










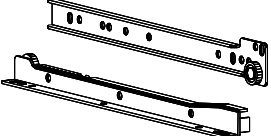










system  
**SKANDI**

**5**


# INSTRUKCJA MONTAŻU

Narzędzia potrzebne do montażu




G21  3x16 x8	G12  4x25 x16	P4  x4	W2  x1	S21  x2
K5  x16	K1  x16	W4  x65	H7  x1	S5  x1
E6  x3	G34  3,5x16 x20	G16  4x27 x6	S1  x1	
A1  ø7x50 x4	F2  x4	B1  ø8x35 x24	C3  x6	D3  x6


I

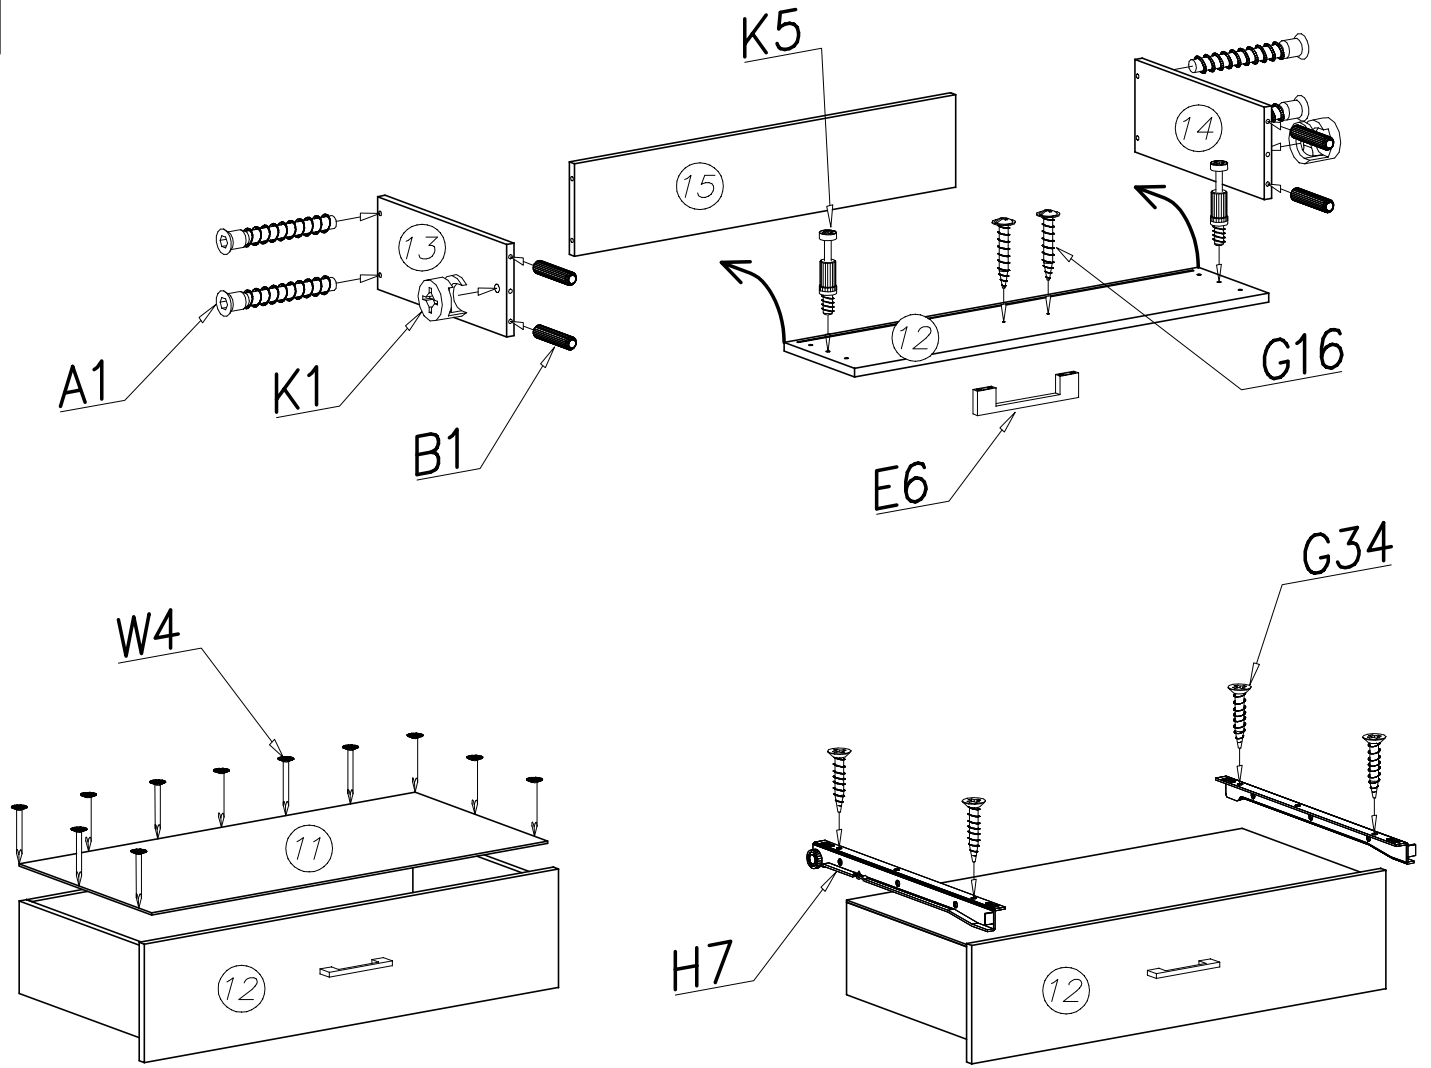


II

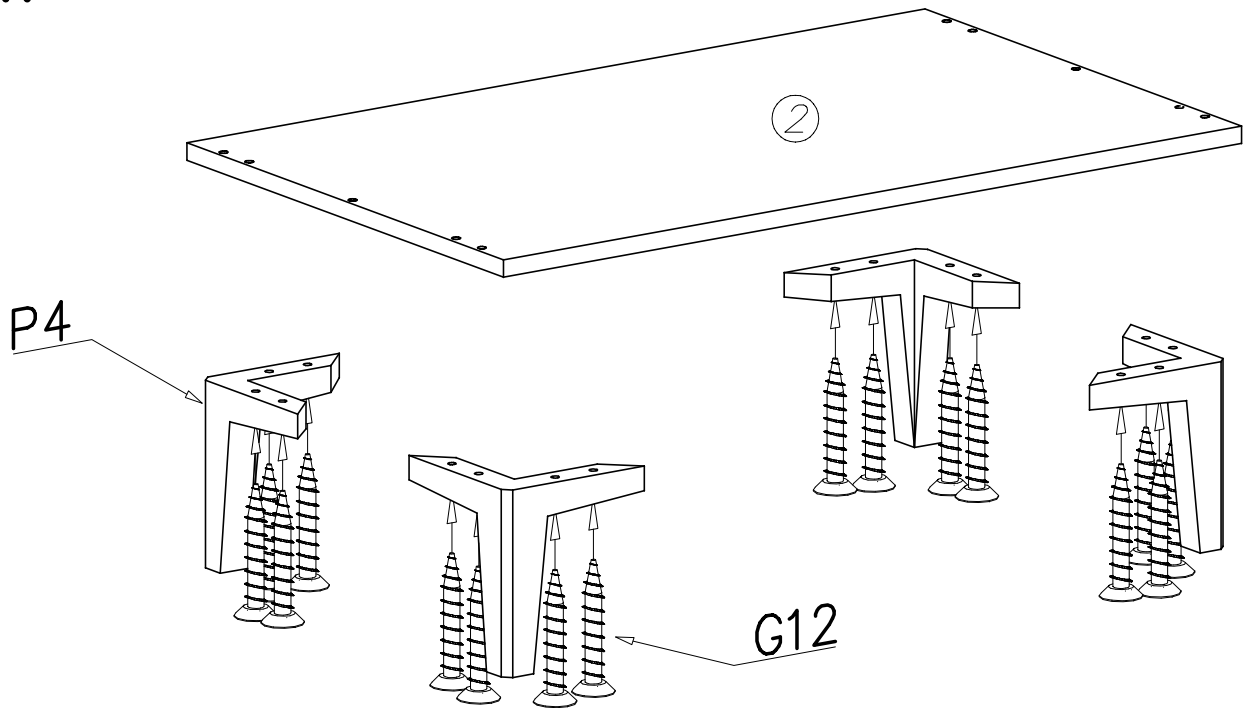

III

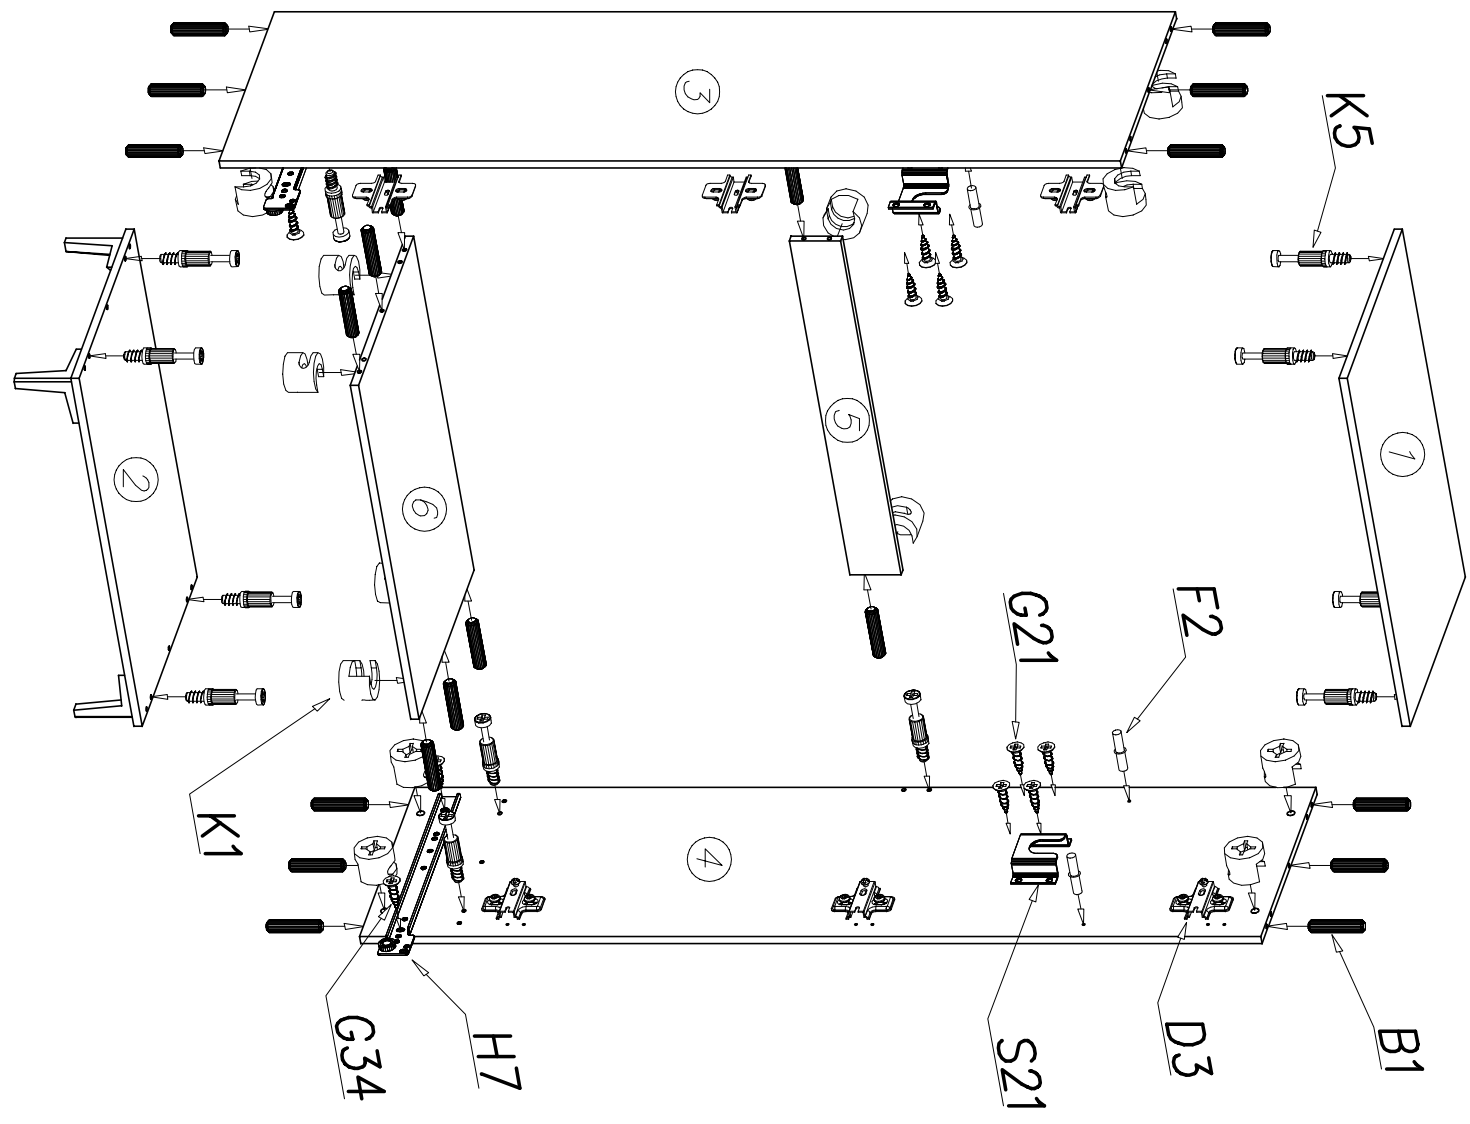

IV

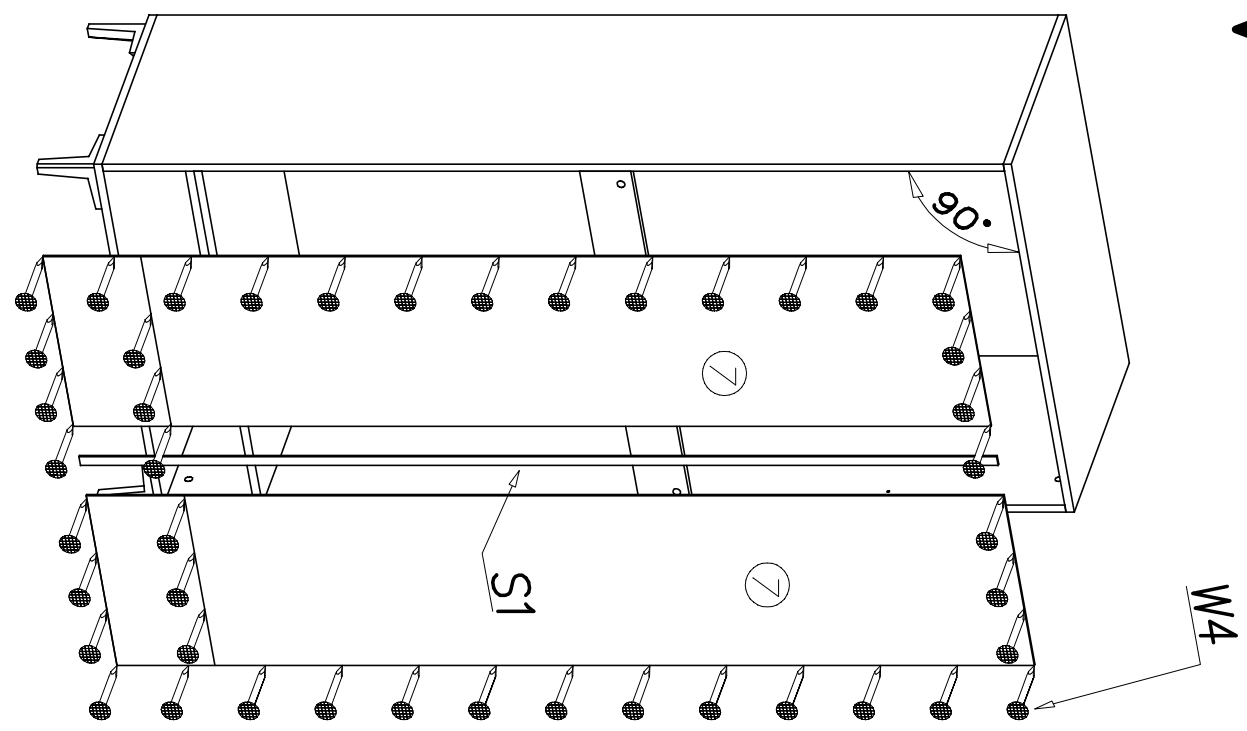

V

